

VTV REMOTE CONTROLLER WITH 2 DIGIT LCD DISPLAY

TELECOMANDO VTV CON DISPLAY LCD A DUE CIFRE

MANDO A DISTANCIA VTV CON PANTALLA DE 2 DIGITOS CON LCD

VTV COMMANDE A DISTANCE AVEC ÉCRAN LCD A 2 CHIFFRES

ON/OFF BUTTON
PULSANTE ON/OFF
BOTON ON/OFF
BOUTON ON/OFF

LCD DISPLAY
DISPLAY LCD
PANTALLITA LCD
ÉCRAN LCD

CLEAR BUTTON
PULSANTE AZZERAMENTO
BOTON PARA A CERO
BOUTON 'MISE À ZÉRO'

FEED BUTTON
PULSANTE AVANZAMENTO
BOTON ADELANTAMIENTO
BOUTON 'AVANCER'



INCREASE THE VOLUME
AUMENTA VOLUME
AUMENTA VOLUMEN
AUGMENTE LE VOLUME DU SIGNAL SONORE

2

DECREASE THE VOLUME
DIMINUISCE VOLUME
DISMINUYE VOLUMEN
DIMINUE LE VOLUME DU SIGNAL SONORE

5

INCREASE SPEAKER VOLUME
AUMENTA AUDIO SPEAKER
AUMENTA AUDIO SPEAKER
AUGMENTE LE VOLUME DU MESSAGE

3

DECREASE SPEAKER VOLUME
DIMINUISCE AUDIO SPEAKER
DISMINUYE AUDIO SPEAKER
DIMINUE LE VOLUME DU MESSAGE

6

DECREASE THE NUMBER
DECREMENTA
DISMINUYE NUMERO
DIMINUE LE COMPTEUR

7

SELECT THE MESSAGE
SCELTA DEL MESSAGGIO
SELECCIONA MENSAJESPEAKER
CHOIX DU MESSAGE

8

MUTE
SILENZIOSO
SILENCIO
ETEINT LE MESSAGE

9



- TO INCREASE THE NUMBER PUSH THE FEED BUTTON
- TO REPEAT THE NUMBER, PRESS ON/OFF BUTTON
- TO CLEAR THE DISPLAY, PRESS "C" BUTTON FOR THREE SECONDS
- TO SWITCH OFF THE DISPLAY (1 OR MORE UNITS), PRESS ON/OFF BUTTON FOR THREE SECONDS
- TO DECREASE THE NUMBER SHOWED ON THE DISPLAY, PRESS BUTTON 7

HOW TO CHANGE THE BUZZER VOLUME:

- TO INCREASE OR (DECREASE) THE VOLUME OF THE AUDIBLE DETECTOR, PRESS BUTTONS 2 AND 5

TO CHANGE THE COMMUNICATION CODE WITH THE DISPLAY, PLEASE FOLLOW THIS PROCEDURE:

- 1) PRESS BUTTONS 1, 4 AND 7 SIMULTANEOUSLY: THE CURRENT CODE IS DISPLAYED (I.E.: "C1")
- 2) PRESS ONE OF THE NUMERIC CODES (1 THROUGH 8) TO SET A NEW CODE
- 3) AFTER THAT, PRESS BUTTON ON TOP OF THE DISPLAY
- 4) THE DISPLAY WILL SHOW THE CURRENT COMMUNICATION CODE (C1 OR C2, ETC) AND WILL WAIT FOR A MESSAGE OF THE CONTROLLER FOR FIVE SECONDS
- 5) PRESSING THE REMOTE CONTROLLER CENTRAL BUTTON, THE DISPLAY WILL GET UPDATED TO THE REMOTE CONTROLLER CODE; AFTER THAT IT WILL SHOW THE TURN NUMBER

WITH SPEAKER SYSTEM MESSAGE.

- TO INCREASE OR DECREASE THE VOLUME, PRESS BUTTONS 3 AND 6
- TO SELECT ONE OF THE SPEAKER MESSAGES, PRESS BUTTON 8
- TO EXCLUDE THE SPEAKER MESSAGE, PRESS BUTTON 9